


BRING YOUR INTERNET UP TO SPEED. IT'S TIME TO UPDATE YOUR EQUIPMENT.

Follow these quick, easy steps to ensure your Wi-Fi is installed properly.

DISCONNECT

Disconnect all cables and the power cord from your existing router.

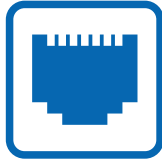

CONNECT

Connect the Ethernet cable into the white Ethernet WAN port on the back of your NEW router.



DISPOSE

Dispose of your old router by recycling it at an appropriate facility.

STEP
01



PLUG IN

Plug the NEW power cord into the power outlet on your NEW Zyxel VMG4825/4927 Wireless Gateway router and the nearest electrical outlet.

STEP
02

STEP
03



RECONNECT

Reconnect any previously connected computers from your old modem to the Ethernet ports on your NEW router.

STEP
04

STEP
05



Use your new router to experience dual band Wi-Fi!*

If the Ethernet cable coming from the wall/jack is yellow, exchange it with the NEW Ethernet cable.
Your NEW router does not have a power button. It powers on when plugged in.
Allow 15 minutes to take effect. If your Wi-Fi settings have not updated after 15 minutes,
power cycle your router and allow an additional five minutes to update.

Wi-Fi Network #1 Name: _____ Wi-Fi Network #2 Name: _____

Wi-Fi Network Password: _____

*Older devices typically function efficiently on the 2.4 GHz Wi-Fi connection.
Newer devices function best on the 5 GHz Wi-Fi connection.



HTC
HIGH-SPEED INTERNET

(843) 369-8989 | www.htcinc.net